




# Panini Maker

## KA-PG04 Series

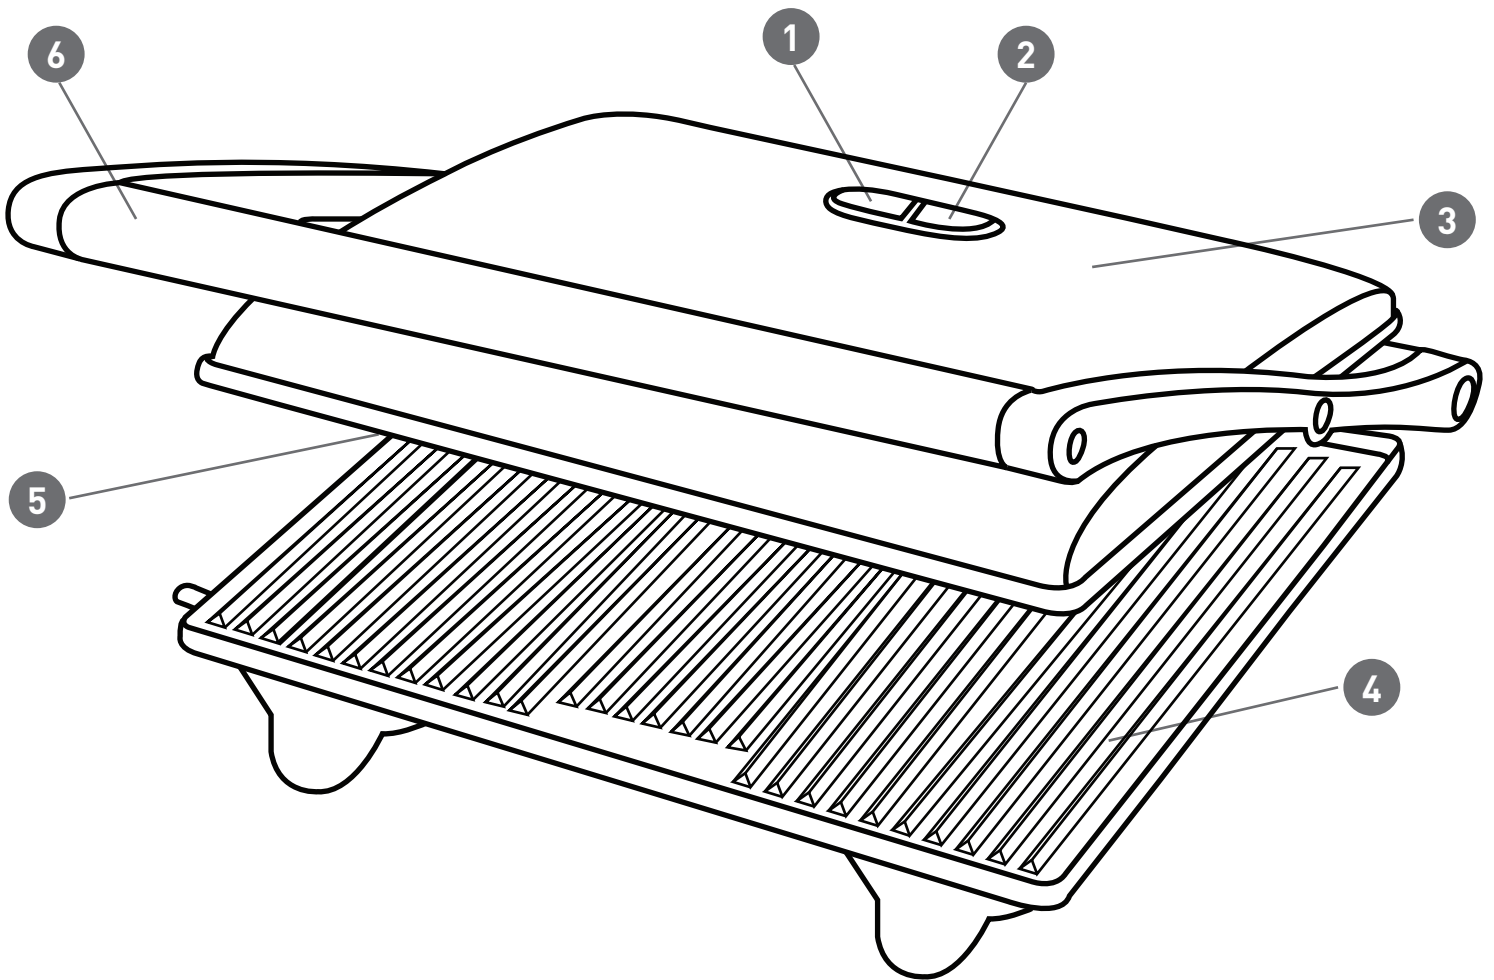

1. Indicator lights (red)
2. Indicator lights (green)
3. Stainless steel top cover
4. Bottom plate
5. Upper plate
6. Cool touch handle

## USER GUIDE

## Introduction

Read this user manual carefully before you use the appliance and save it for future reference.

## Caution

1. Read all instructions carefully before use.
2. Keep this instruction manual, the packaging and your receipt. If you give or sell the product to a third party, please make sure that you also hand out this instruction manual.
3. Before first use, check to ensure the voltage indicated on the unit corresponds to the voltage of your home.
4. This appliance is for household use only.
5. Do not let the cord hang over the edge of a table or counter.
6. Always pull the plug from the mains supply when cleaning and not in use.
7. For indoor, domestic use only. Keep it away from sources of heat, direct sunlight, open fire or high humidity and never operate it with wet hands.
8. Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances, make sure the cables are not hanging down.
9. Keep away from children. Do not allow children to play with the unit.
10. To prevent electric shock or other injury, never immerse the appliance in water or any other liquid, nor rinse it under the tap.
11. Never use the appliance if it is damaged.
12. If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
14. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
15. **WARNING:** This electrical appliance contains heating function surfaces and can develop high temperatures and should be used with **CAUTION**. The equipment should only be operated using the intended handles. We recommend using heat protection gloves or similar. You should give the appliance sufficient time to cool down before touching.
16. Always operate the appliance on an even surface.
17. Do not touch the outer surface whilst the appliance is in use as it may be hot.
18. Before connecting to the mains supply, the heating plates must be in a closed position.
19. Make sure that there is enough ventilation, so that the hot steam can clear.
20. Do not try to repair the appliance yourself, always contact enquiries@dihl.co.uk in the first instance.

**Do not touch the outer surface when the appliance is in use as it may be hot.**



## How to Use

1. Uncoil the cable completely.
2. Check if the heating plates are clean and dust-free and if necessary, wipe them with a damp cloth.
3. Place the appliance on a flat, level surface.
4. Connect the plug to the mains supply and the red and green light will be illuminated at the same time indicating that the cooking surface has begun pre-heating. As soon as the cooking surface has reached the appropriate temperature (usually it will take between 2½ to 3½ minutes), the green light will no longer be illuminated, leaving just the red light on (during the operating process, the red light will always be on). The appliance is now ready to cook.
5. Open the appliance and place your food on the lower plate. Please note that frozen food should be completely defrosted prior to cooking.
6. At this point close the appliance and the green light will be illuminated again. (During this time, the indicator light will turn on and off due to the automatic temperature control).
7. During cooking, excess fat will flow through the drain holes into the drip tray.
8. Open the appliance after the green light turns off. At this point your food should be ready but cooking time can be extended according to your taste.
9. After cooking, open the appliance and remove your food with a wooden or plastic utensils

## Cleaning and maintenance instructions

1. Be aware that parts of the appliance become very hot during operation. Unplug and wait for it to completely cool down before cleaning or storing.
2. Wipe the cooking surface with a soft damp cloth after each use. If it is difficult to remove residues, use a little oil to soften it.
3. Do not use any spray-on metal objects as this would damage the non-stick coating.
4. In case of any problem, please contact [enquiries@dihl.co.uk](mailto:enquiries@dihl.co.uk) for help.

## Storage

1. Unplug the appliance and let it cool down.
2. Make sure all parts are clean and dry.

## Disposal

This means that this product must not be disposed of together with ordinary household waste, as electrical and electronic waste must be disposed of separately.

In accordance with the WEEE directive, every member state must ensure the correct collection, recovery, handling and recycling of electrical and electronic waste. Private households in the EU can take used equipment to special recycling stations free of charge. In certain member states, used apparatus can be returned to the dealer where they were bought on the condition you buy new products. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

## Technical Specifications

|              |                         |
|--------------|-------------------------|
| Model no.    | KA-PG04                 |
| Power Rating | 2000 W                  |
| Main Supply  | 220 - 240 V, 50 - 60 Hz |

## Support

If you need more information or if you have a problem, please contact Dohl at [enquiries@dohl.co.uk](mailto:enquiries@dohl.co.uk). If you have purchased your item from another retailer, please contact them directly.

[www.dohl.co.uk](http://www.dohl.co.uk)



**value**

quality

**no** compromise