


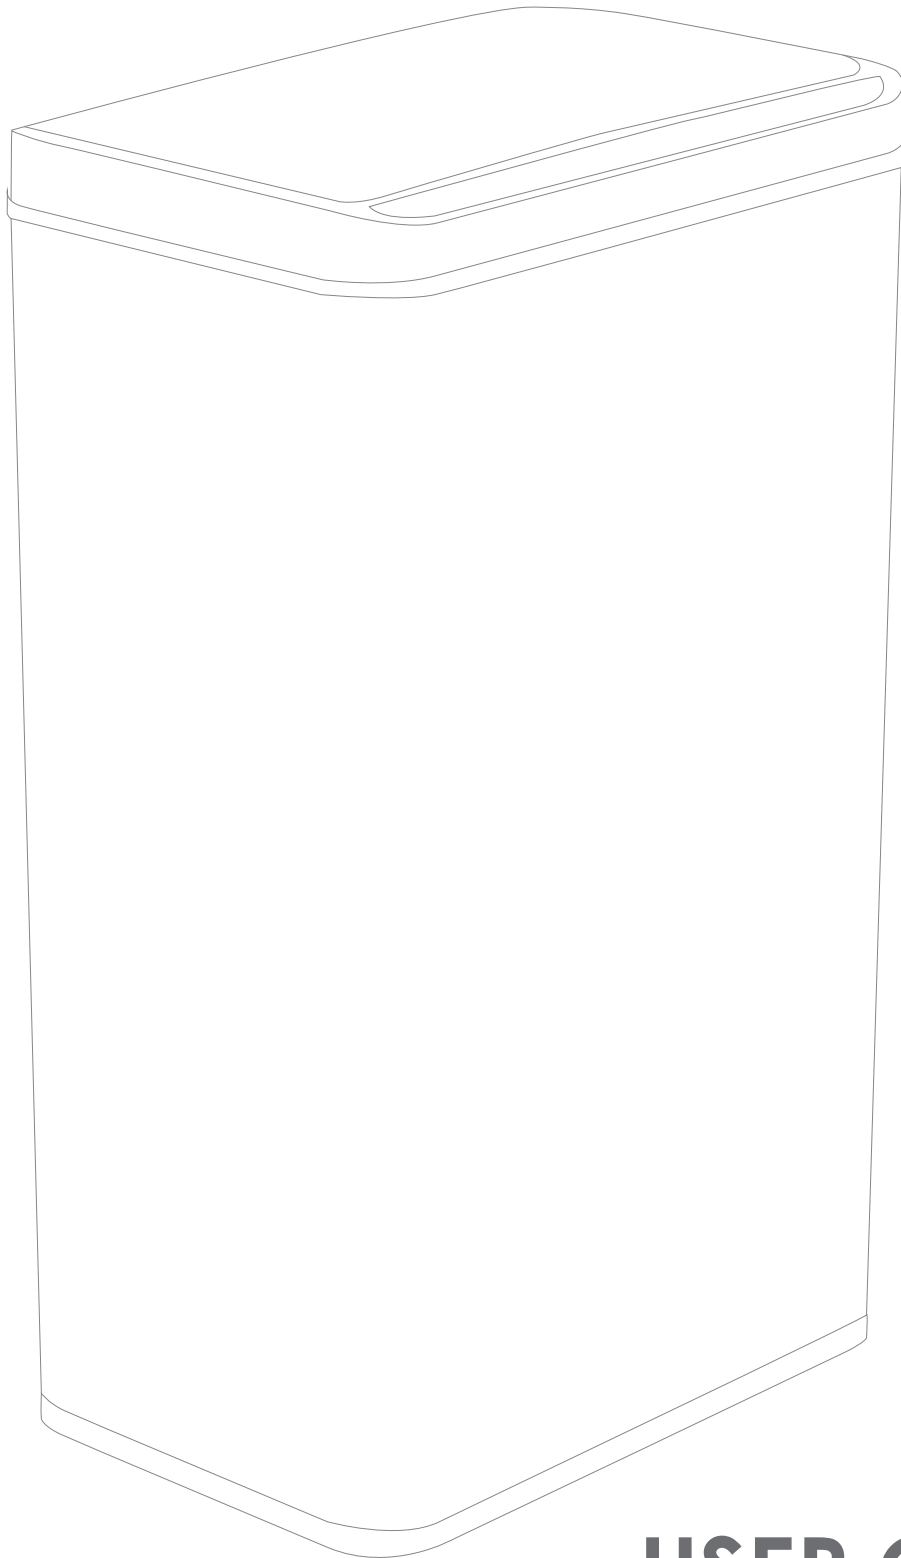


# Dual Sensor Bin

## SB-DUAL-50L



**USER GUIDE**

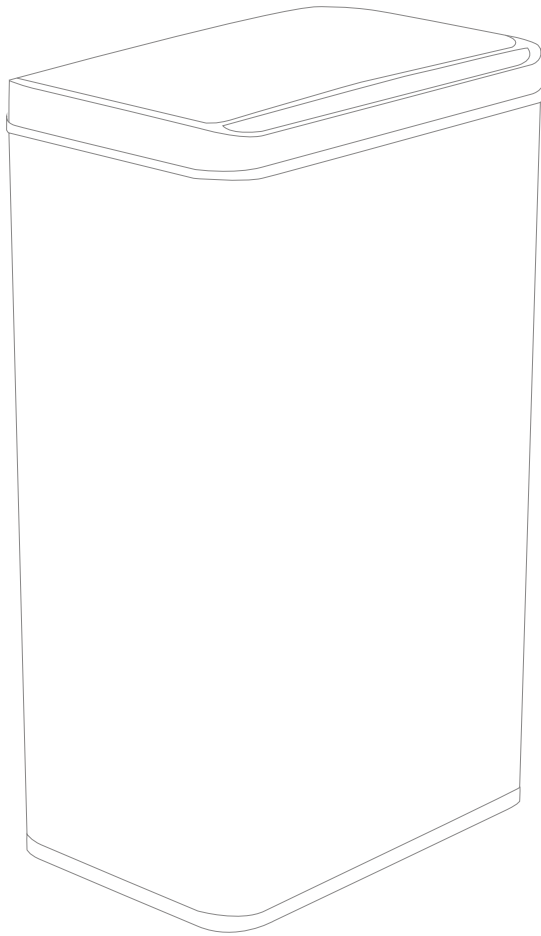

## Contents

Using the Appliance .....	2
Reference Images.....	2
Instructions.....	2
Cleaning.....	3
Troubleshooting.....	3
Environmental Info and Support....	4

### Introduction

Congratulations on your new purchase and thank you for choosing Dihl.

Your new sensor bin is brilliant for if you have your hands full or are preparing food and don't wish to touch the bin lid. Comprises 2 x 25L bins - more than enough room for all your recyclables. Suitable for a range of recycling requirements including general household waste, glass, paper, cans & food waste.

The sensor will recognise your presence and open the bin for you. Once you are around 15cm away from the bin, the timer will count down 5 seconds and close the lid automatically for you.

# USING THE APPLIANCE

## Warning

1. Do not place the appliance against a wall or other appliances. Leave at least 10cm of free space at the back, side and above the appliance.
2. Never force the lid to open or close.
3. Do not use the appliance for any other purpose than is described in this manual.
4. This appliance is intended for normal household use only. It is not intended for use outside.
5. Do not attempt to repair the product yourself, otherwise, your guarantee becomes invalid. Contact your retailer or Dihl in the event of any problems.
6. Never immerse the lid in water nor rinse it under the tap as it contains electrical components.
7. Avoid any water or liquids from touching the bin lid sensor mechanism as this will cause it to rust and break.
8. If using rechargeable batteries, ensure they are fully charged before first use.
9. Avoid placing the bin next to an oven or other heat sources as it may cause the batteries to explode.

## Instructions

DiHl sensor bins send out invisible pulses of light (infrared) that hit nearby objects. Once an object is around 15cm away from the sensor, the light will bounce back and trigger the sensor to lift the bin lid.

1. Place a bin liner on each side of the bin.
2. Use the retaining ring to secure the bin liners in place.
3. Insert 6 x AA batteries in the correct position and place the battery cover into place. Secure the bin lid on the bin.
4. To turn the lid on, there is a switch at the back of the lid, set this to ON, the bin will then be in automatic mode.
5. Wave your hand around 15cm (+, -5cm) away from the lid and this will trigger the lid to open automatically.
6. Once the rubbish is deposited and you have walked away from the bin. The timer will countdown, 5, 4, 3, 2, 1 and then close automatically.
7. The bin can also be used in manual mode when the 'OPEN' and 'CLOSE' button can be used to open the lid. Once the lid is closed, the lid will go back into automatic mode. When using the buttons to manually operate the bin, '0' will appear on the timer.

## Cleaning

Ensure that the bin lid is cleaned regularly with a clean, dry cloth. Do not let dirt build up around the sensor mechanism as this will cause the sensor to stop working overtime.

1. Turn off and remove the lid.
2. Wipe the inside the lid with a clean, dry cloth or an antibacterial wipe. Ensure the lid is dried afterwards if using an antibacterial wipe.
3. Wipe the inside and outside of the bin with a clean, damp cloth.

# TROUBLESHOOTING

The table below contains some common instructions you may find useful.

**Note:** If you have followed all the steps in the manual and the issues still occur, please contact the retailer.

Fault	Reason / Solution
Lid will not open	Check the batteries are inserted correctly and are in the correct position. Turn the bin OFF and ON again using the button at the back of the bin. Clean the sensor area with a dry, clean cloth. Reset the sensor by turning off the bin and taking the batteries out for 24 hours.
Lid will not close fully	Check nothing is blocking the lid before trying to close. Clean the sensor area with a dry, clean cloth. Reset the sensor by turning off the bin and taking the batteries out for 24 hours.
Lid operates slowly	Check the batteries are inserted correctly and haven't fallen out of place. Replace the batteries.
Lid opens and slams back down	The lid has been forced open and/or closed, a new lid is required.
Lid stays open and will not close	Rubbish or object is too close to the lid and is triggering the sensor.
Lid opens and closes constantly	Kitchen counter or shelf is directly above the sensor. A person walked by and was too close to the sensor. Intense fluorescent lights are directly above the sensor.
Lights are on but there is no power	The motor is broken, a new lid is required.

## Environmental Info

Do not throw away the appliance with the normal household waste at the end of its life; hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

## Warranty

Your new Dohl product is supplied with a warranty of 12 months from the date of purchase. The product must be used in the manner indicated within this manual. Any abuse of any parts of the product will invalidate the warranty.

## Support

If you need more information or if you have a problem, please contact Dohl at [enquiries@dohl.co.uk](mailto:enquiries@dohl.co.uk). If you have purchased your item from another retailer, please contact them directly.

To view our entire product range, visit

[www.dohl.co.uk](http://www.dohl.co.uk)



**value**

quality

**no** compromise